

# QUATTRO®

THE RUBBER & RESIN SPECIALIST

## Bonded and Sealed Stable Kit Instructions



### Step One

ENSURE THE STABLE IS CLEAN AND DRY, SWEEP OR VACUUM UP EXCESS DIRT AND DUST. IF THE AREA IS EXTREMELY DUSTY SOMETIMES THE CONCRETE BASE BENEFITS FROM BEING PRIMED WITH Q/SEAL.

CONCRETE BASE MUST BE FLAT AND IN GOOD CONDITION. PLEASE NOTE MATS WILL NOT BOND TO A HEAVILY TAMPED SURFACE. WE HAVE MATERIALS FOR FILLING AND LEVELLING IF REQUIRED. FLOOR MUST BE DRY.



### Step Two

IT IS BEST TO CUT MATS IN LOOSE, COVERING THE FULL STABLE. START WITH FULL MATS AT THE FRONT OF THE STABLE THEN SMALLER CUTS ARE TO THE BACK AND THE SIDE AWAY FROM THE DOOR.

A STANLEY KNIFE WITH A SHARP BLADE IS THE BEST TOOL TO USE FOR CUTTING THE MATS. CHANGE THE BLADE AS SOON AS IT BECOMES DIFFICULT TO CUT.



### Step Three

ONCE ALL THE MATS HAVE BEEN CUT IN LOOSE, POUR THE SUPERFLEX MEMBRANE HARDENER INTO THE SUPERFLEX MEMBRANE RESIN THEN MIX TOGETHER USING A DRILL WITH A MIXING ATTACHMENT.

STARTING WITH THE MATS AT THE BACK OF THE STABLE DOUBLE THE MATS BACK ONTO THEMSELVES LONGWAYS TO ALLOW FOR BONDING.

GLOVES MUST BE WORN FOR MIXING AND APPLICATION OF RESINS.



### Step Four

SPREAD THE MIXED SUPERFLEX MEMBRANE TIGHTLY WITH A 3MM V NOTCHED SERRATED TROWEL OR LIGHTLY WITH THE FLAT EDGE OF A METAL FLOAT. AT A RATE OF APPROX 0.9M<sup>2</sup> PER KG.

LAY MATS BACK INTO PLACE ONTO THE WET SUPERFLEX MEMBRANE INTO THE PERMANENT POSITION.

Quattro Products Limited, Milestone House Industrial Estate, Penrith, Cumbria CA11 9NQ

www.quattorubberandresin.co.uk Tel: 01768864977 enq@quattorubberandresin.co.uk

# QUATTRO®

THE RUBBER & RESIN SPECIALIST

## Bonded and Sealed Stable Kit Instructions



### Step Five


APPLY A BEAD OF Q/FLEX USING A BARREL GUN ALONG OPEN SIDES OF MATS BEFORE PUTTING THE NEXT MAT INTO PLACE.  
CARRY ON UNTIL ALL THE MATS ARE IN PLACE ENSURING THAT THEY ARE PUSHED UP TIGHT.  
USE THE Q/FLEX AROUND THE PERIMETER TO SEAL THE EDGE. SCRAPE OFF ANY Q/FLEX THAT SQUEEZES UP OUT OF THE JOINT.  
Q/FLEX SEALER LEFT ON THE TOP OF THE MATS WILL PEEL AWAY WHEN THE AREA IS PUT INTO USE.



### Step Six

A DOORWAY STRIP IS SUPPLIED ALONG WITH FIXINGS.  
WITH SOME LEFT OVER Q/FLEX SET THE DOORWAY STRIP ONTO A BED OF Q/FLEX THEN DRILL INTO PLACE WITH THE FIXINGS SUPPLIED.

## Tools You Will Need

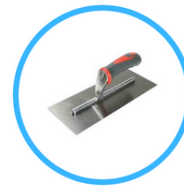

**Tape Measure, Sharp Stanley Knife, 600ML Barrel Gun, Mixer attachment for Drill, 3mm V Notched Serrated Trowel & Gloves.**

Superflex Membrane must be kept stored at more than 5°C or the hardener will crystallize if too cold. If this happens place the hardener near a heater until it is liquid again.

**Once complete it is best to leave the stable 24 hours before using.**

Need More Help - Call our office to discuss on 01768864977

Quattro Products Limited, Milestone House Industrial Estate, Penrith, Cumbria CA11 9NQ

www.quattorubberandresin.co.uk Tel: 01768864977 enq@quattorubberandresin.co.uk